

Battery Holder



The battery holder comes with two small screws which will be screwed into the top of the hexagonal pillars that you fitted yesterday. But first, you need to plug in wires from the motors into the white sockets in the rear corners of the chassis. They will only fit one way round, so you can't plug them in incorrectly.

Then carefully wind the wires together so that they lay below the battery holder and do not get trapped between the pillars and the battery holder.

WARNING: Make sure the motor wires do not get trapped. It will prevent the robot from working

