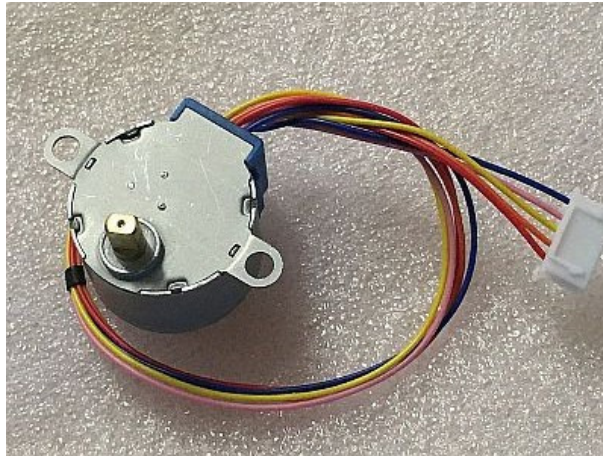


Right Motor

This is the second motor and is used to drive the right wheel of the robot.

It cannot be fitted until further parts are received (sorry)