


Using the Servo Gizmo with Playground for Crumble

Requirements:

- Playground for Crumble with Crumble attached and batteries installed
- Servo Gizmo
- 1 x Connection cable

Connections:

- 1. Switch Playground OFF
- 2. Plug connection cable from Pin A on Playground an into the Servo Gizmo
- 3. Switch Playground ON

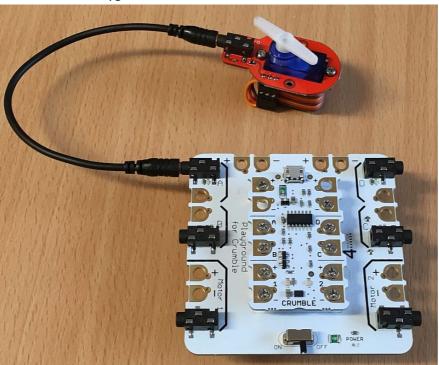

Simple Software Demo:

This software will Move the servo fully left, then centre it, then fully right, centre and repeat

```
program start

do forever

servo (A) -90 degrees

wait (1) seconds

servo (A) (9) degrees

wait (1) seconds

servo (A) (90) degrees

wait (1) seconds

servo (A) (0) degrees

wait (1) seconds
```